
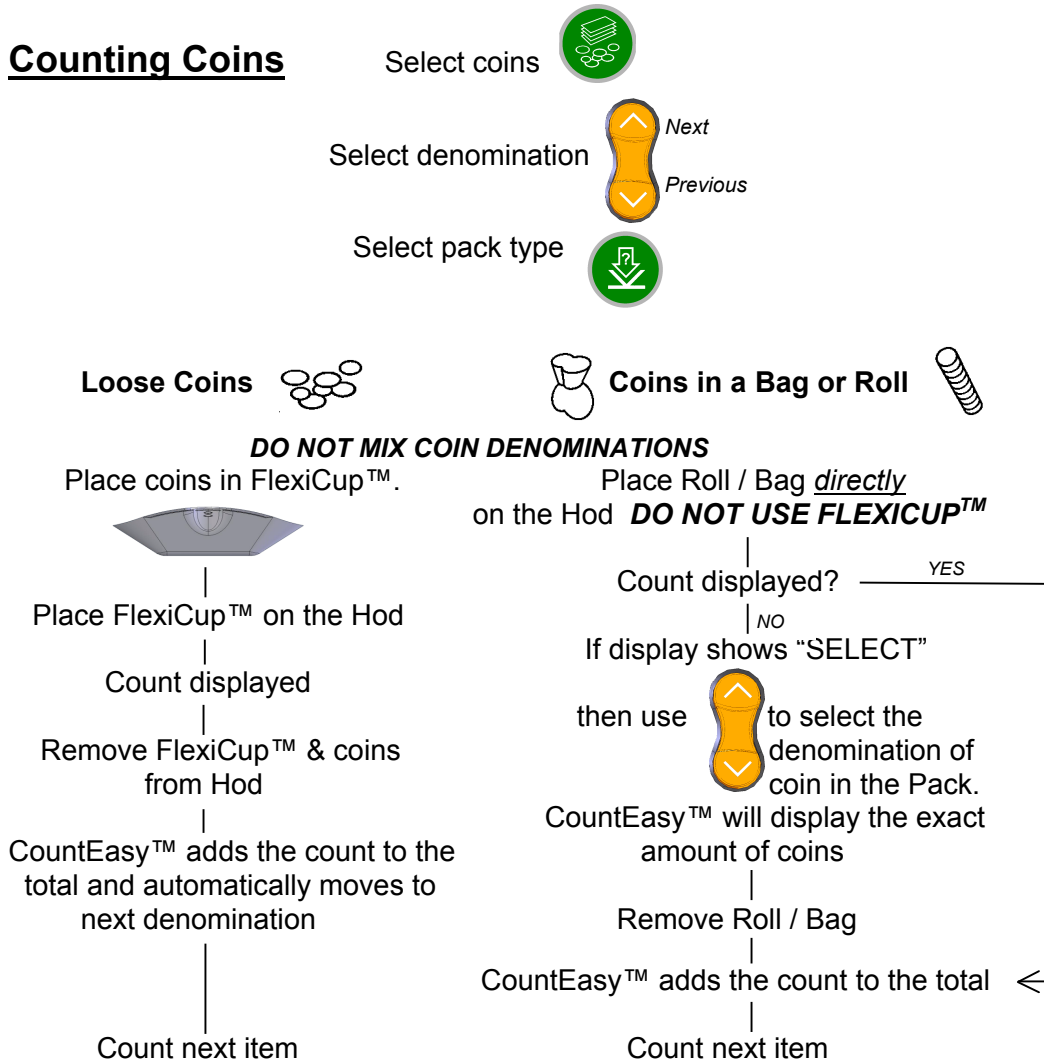



## Switching On

- 1: Place your CountEasy™ on a *flat stable* surface away from draughts.
- 2: DO NOT use near an open window, fan or air-conditioning.
- 3: Ensure hod is empty
- 4: Turn on 

## Counting Coins



## Counting Notes

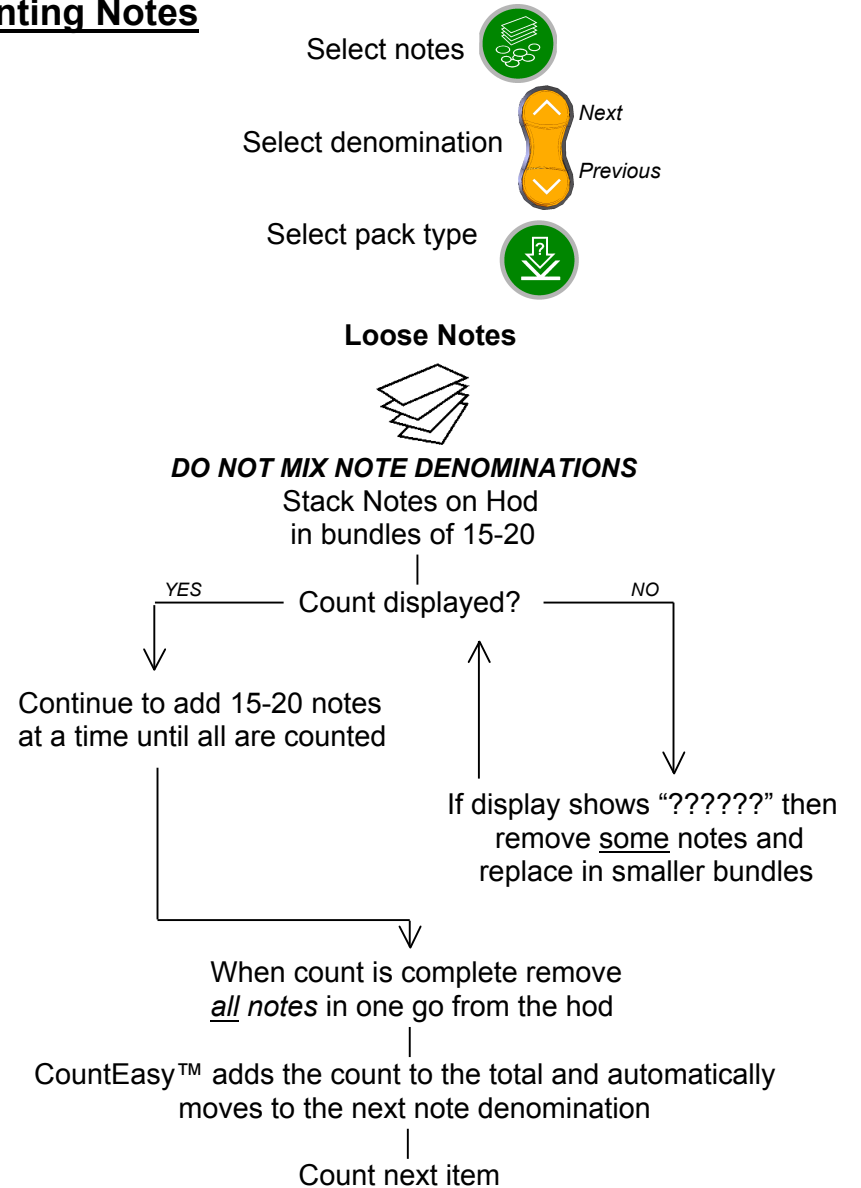



To **Clear Totals** press  followed by 

To **Turn Off** press  and hold

# CountEasy™ Retail Quick Reference Guide



## Error Messages

- 1:   means remove the item (s) from the hod.
- 2: 'REPLACE/ZERO' means that something has been removed from the hod and needs to be replaced or "zeroed" before weighing can take place.
- 3: 'REMOVE/ZERO' means something has been added to the hod and needs removing or "zeroing" off before weighing can take place.

## Warnings

- 1: DO NOT drop heavy weights onto the hod. Maximum weight 1 Kg.

**CAUTION:** Batteries must be replaced with correct type - refer to CountEasy™ Retail Configuration Manual. There is a risk of explosion if the batteries are replaced by an incorrect type. Dispose of used batteries according to the manufacturers instructions.

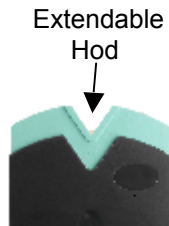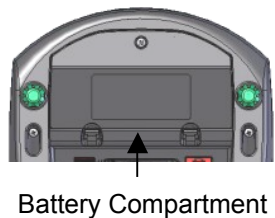

Refer to the CountEasy™ Retail Configuration Manual for the configuration options available and the website for answers to the most Frequently Asked Questions / Troubleshooting Guide.




[www.CountEasy.info](http://www.CountEasy.info)  
Helpdesk: refer to machine



Recyclable

14-201667 V.03 Feb 2004 LB

## Assembly

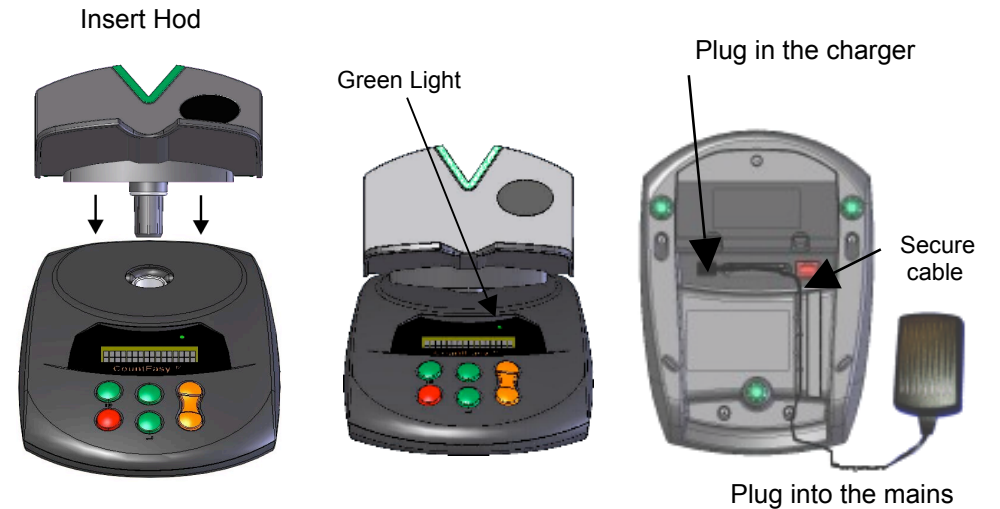

Charge the CountEasy™ for 12 hours before using in portable mode. The green light indicates CountEasy™ is charging.

## Controls

